



SMART SECURITY CAMERA

QUICK START GUIDE





Introduction

This smart security camera is designed for use in homes, apartments, offices, garages and sheds. It's easy to set up and operate, giving you and your family the security and peace of mind that you deserve.

You can monitor your camera remotely through the Mercator Ikuü app, which can be downloaded for free from the Apple App Store and Google Play Store.

Contents

- 1 x Smart Security Camera
- 1 x USB Power Adaptor
- 1 x Micro USB charging cable
- 1 x Mounting Bracket
- 2 x Mounting Screws and Wall Plugs



Identification

Camera Lens
2304 x 1296p (3MP)
with 100° field of view (diagonal)

Microphone
Supports one & two way audio

Reset Button
Hold for 5 seconds to reboot and return all settings to factory defaults. This will allow you to connect to a different Wi-Fi network if required.

Speaker

5 Vdc Power Port
Connect the adaptor to a standard power outlet and connect to the camera using the provided Micro USB cable and adaptor.

Micro SD Card Slot
Use a micro-SD memory card to record video 24/7 (Supports up to 256GB micro-SD card). Not included* Class 10 required

Set Up the App

1. Download the Mercator Ikuü app.
2. Tap 'create new account' or 'log in to account'.
3. Follow the in-app prompts and tap 'OK'.

Connect Your Camera to the App: Wireless Method


1

 
Log in to the Mercator Ikuü app.



Note: ensure that your camera is in pairing mode. It should beep twice every 15 seconds. If it isn't, press and hold the reset button on the back of the unit for 5 seconds and wait for the camera to restart.

2

Tap the  icon and select 'Add Device'.

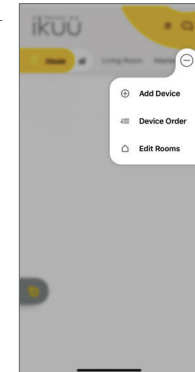




Connect Your Camera to the App: Wireless Method (Cont.)


3

 Select 'Cameras' from the sidebar, and then tap the Pan and Tilt Camera icon.

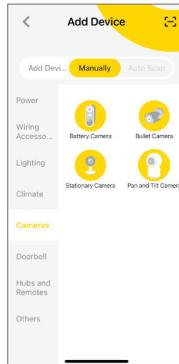


4

 When the prompt appears, tap 'next step'.

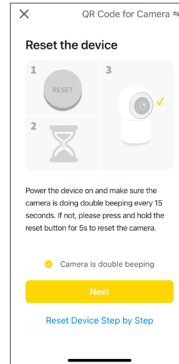


6

 Place the camera eye over the QR code to scan (holding the camera 15cm away from your mobile screen). When you hear the prompt, tap 'I Heard a Prompt'.

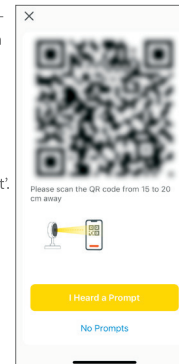


7

 The app will begin connecting to your security camera. When it reaches 100%, you will be taken to the product's settings page.

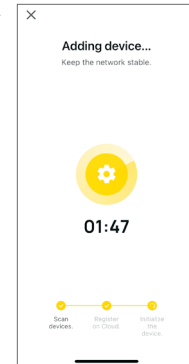


5

 Enter your Wi-Fi name and password, then tap 'Next'.

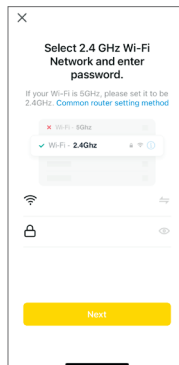


8

 Update the name of the device then tap 'Done'.

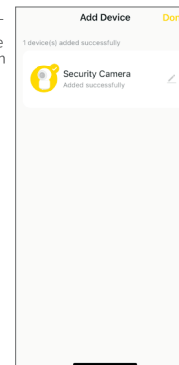

9

 The camera feed will open, and your camera is now connected and ready for use.

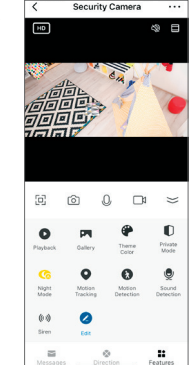




Connect Your Camera to the App: Auto Scan


1

 Open the Mercator Ikuü app. Select Auto Scan and make sure your product is still in pairing mode. When your camera is discovered, tap 'next'.

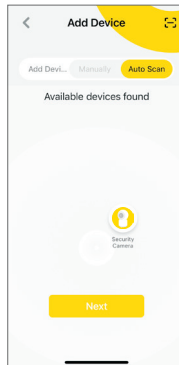


2

 Enter your Wi-Fi name and password, then tap 'Next'.

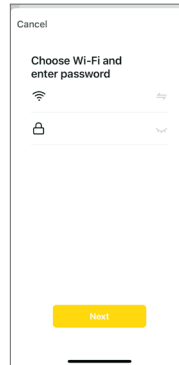

3

 The app will begin connecting to your camera. When it reaches 100% you will be taken to the added successfully page.

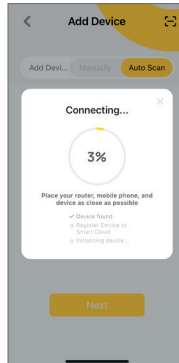

4

Update the name of the device then tap 'Done'. The camera feed will open, and your camera is now connected and ready for use.



Camera Functions



Take a photo of the live video feed, which will be saved to the photo album.



Siren

Manually active the *70 decibel siren ON/OFF.
*70db is measured at 1 metre distance.



Speak through the camera speaker via your phone microphone.



Gallery

View previously saved photos and video recordings. You can download these to your local mobile device.



Take a video of the live video feed, which will be saved to the camera album.



Night Mode

Auto: Night vision will come on automatically when the light level is low.
Off: Night vision will be off, regardless of light level
On: Night vision will be on, regardless of light level



Playback

Review camera footage from the SD card (if installed).



Theme Colour

Customise themes in Light mode or Dark Mode.



Motion Tracking

Enable motion tracking to allow the camera to automatically pan and tilt to track nearby sources of movement.



Sound Detection

Enable sound detection to receive alerts when sound is detected.



Motion Detection

 
Enable motion detection to receive alerts when motion is detected.

Installation Instructions

Before choosing your preferred location, check the Wi-Fi strength/coverage is adequate.

CEILING MOUNT

- Using the mounting bracket as a template, mark the screw positions on the ceiling.
- Drill the holes into the ceiling and push the wall plugs into the holes.
- Use the mounting screws to install the mounting bracket on the ceiling.
- Attach the camera to the mounting bracket and tighten the knob screw to secure the camera.

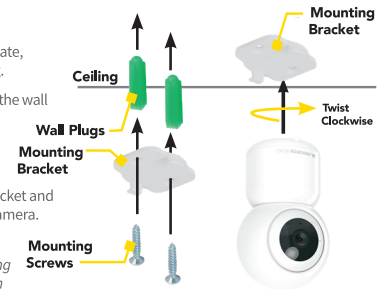








Note: To get the correct orientation for ceiling mount, navigate to settings > basic function settings > flip screen.



App Features

Want more from your products? The Mercator Ikuu app can help you to customise your smart products any way you like. Detailed guides on these features can be found at www.ikuu.com.au.

- | | |
|---|--|
|  Rooms |  Timers |
|  Scenes |  Alerts |
|  Automation |  Sharing |
|  Routines |  In-App Customer Service |

You can speak to our customer service team directly via phone on **1300 552 255 (AU)** or **0800 003 329 (NZ)**, or via email at customercare@mercator.com.au

Warranty

Mercator guarantees this product against defects of materials and workmanship for a period of 36 months from the date of purchase provided the product is used for its proper purpose, in accordance with Mercator's recommendations and within such voltage and current limits as are specified by Mercator in relation to the product. Mercator will at its own option and cost make good, or replace this product with the same or similar product and return it to you, or provide a credit for any product manufactured or supplied by it, which proves to be defective within the limits set out above provided that no repairs, alterations or modifications to the product have been undertaken or attempted by anyone, other than Mercator or its authorized agents. Should you wish to make a claim under this guarantee, the product and proof of purchase must be returned pre-paid by you to the place of purchase.

This guarantee is in addition to and does not take away from any other rights and remedies you may have under any relevant law.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Please retain your proof of purchase for all warranty claims.

For all Sales & Warranty enquiries

Mercator (ACN 005 946 958)
Caribbean Park, 36 Lakeview Dr,
Scoresby, Victoria, 3179, Australia

P.O. Box 2596, Rowville, Victoria,
3178, Australia

For sales and product information telephone Customer Service: 1300 552 255